



YST BB2008-1 Adjustment Instruction

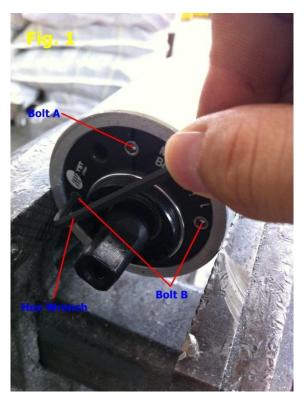

1. Release both Bolt B and bolt A with Hex Wrench for 2-3mm. (See Fig.1)




2. Use Hammer and Hex Wrench to knock the both heads of Bolt B to release BB2008-1.(See Fig.2)

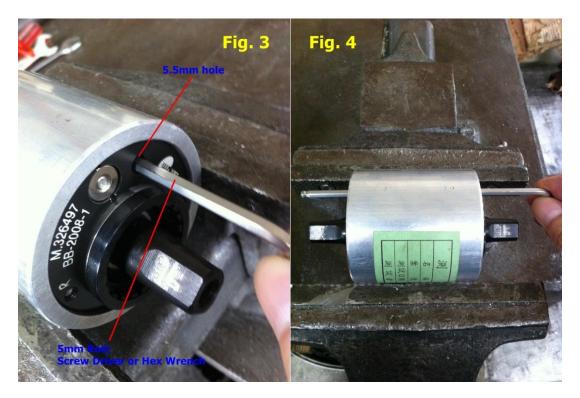

3. Insert 5mm Rod through into 5.5mm holes from left to right.(See Fig.3 $^{\sim}$ 4)



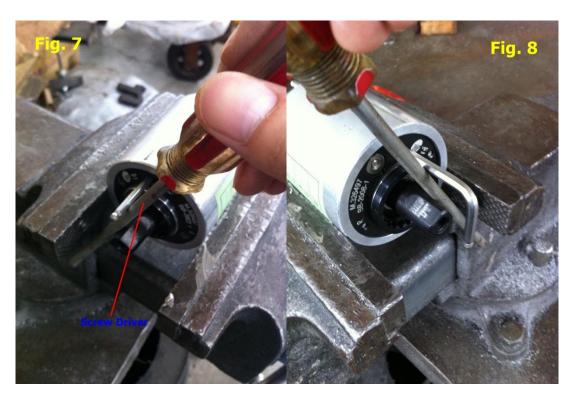

- 4. Use Wrench or Screw Driver to push 5mm Rod from both side, Then turn the Wrench or Screw Driver to the direction and angle you want.(See Fig.5~8)
- 5. Tighten up both Bolts B one by one, Bolt A for the last one with Torque Wrench by 25~28 Kgf-cm.